

# Apollo Gauge Calibration

(Basic and Visual)

Tank Model	Set Switches ON	Height (cm)	2nd Stage Setting (Visual ONLY)
650SL	1, 4, 5, 7, 8	106	1 Bar
920SL	1, 4, 5, 7, 8	107	1 Bar
1100SL	1, 3, 5	132	4 Bars
1200LP	1, 5, 7	74	0 Bars*
1300SL	1, 3, 7, 8	124	3 Bars
1400HZ	1, 4, 5, 7, 8	106	1 Bar
1450VT	1, 4, 5, 6, 7	114	2 Bars
1650HZ	1, 4, 5, 6, 7	111	2 Bars
2100HZ	1, 3	116	2 Bars
2500HZ	1, 3, 5	131	4 Bars
2500VT	1, 3, 7, 8	123	3 Bars
3900VT	1, 3, 5	130	4 Bars
5400VT	1, 3, 4, 5, 6, 7	176	6 Bars
10000VT	1, 2, 3, 4, 5	294	10 Bars
<b>350 Bunded</b>	1, 4, 6	93	0 Bars
<b>650 Bunded</b>	1, 4, 5, 7, 8	106	1 Bar
<b>1000SSL Bunded</b>	1, 3, 7, 8	124	3 Bars
<b>1000 Bunded</b>	1, 4, 5, 6, 7	114	2 Bars
<b>1100 Bunded</b>	1, 3, 5	131	4 Bars
<b>1200 Bunded</b>	1, 5, 7	74	0 Bars*
<b>1225 Bunded</b>	1, 3, 7, 8	122	3 Bars
<b>1300 Bunded</b>	1, 3, 7, 8	124	3 Bars
<b>1400 Bunded</b>	1, 4, 5, 7, 8	106	1 Bar
<b>1400SSL Bunded</b>	1, 3, 5, 6, 8	143	5 Bars
<b>1450 Bunded</b>	1, 3	117	2 Bars
<b>1650 Bunded</b>	1, 4, 5, 6, 7	111	2 Bars
<b>2000 Bunded</b>	1, 3	115	2 Bars
<b>2500 Bunded</b>	1, 3	116	2 Bars
<b>2700 Bunded</b>	1, 3, 5, 6, 8	141	5 Bars
<b>3500 Bunded</b>	1, 3, 4, 6	157	5 Bars
<b>5400 Bunded</b>	1, 3, 4, 5, 6, 7	176	6 Bars
<b>7500 Bunded</b>	1, 2, 4, 5, 7	234	8 Bars
<b>10000 Bunded (Old)</b>	1, 2, 3, 4, 5	294	10 Bars
<b>10000 Bunded (New)</b>	1, 2, 3, 5, 8	260	9 Bars
<b>1300SLFS</b>	1, 3, 7, 8	123	3 Bars
<b>1400FS</b>	1, 3	117	2 Bars
<b>2500FS</b>	1, 3	117	2 Bars
<b>2500SLFS</b>	1, 3, 7, 8	120	3 Bars
<b>3500FS</b>	1, 3, 5	130	4 Bars
<b>5000FS</b>	1, 3, 4, 5, 6, 7	176	6 Bars
<b>7500FS</b>	1, 2, 4, 5, 7	234	8 Bars
<b>10000FS (Old)</b>	1, 2, 3, 4, 5	294	10 Bars
<b>10000FS (New)</b>	1, 2, 3, 5, 8	260	9 Bars
<b>Transfuel</b>	1, 6, 8	600	0 Bars*

NB: Battery for Apollo gauge is CR2430

\* Apollo Visual not recommended for Low Profile or Transfuel tanks due to 800mm min setting for height