

# Technical Data

## COMPACT DIESEL PUMP



Applies to the following models **only**:

- ECON45 - ECON45.MAN

**Please read carefully before commencing installation**

Registered Office: HYTEK (GB) LIMITED, Delta House, Green Street, Elsenham, Bishop's Stortford CM22 6DS UK. Registered in England No. 1915382

Tel: +44 (0) 1279 815 600 Fax: +44 (0) 1279 812 978 email: [info@hytekgb.com](mailto:info@hytekgb.com) Web: [www.hytekgb.com](http://www.hytekgb.com)

## **ENVIRONMENTAL INFORMATION**



European Directives 2002/96/EC and 2003/108/EC require that the equipment bearing this symbol on the product and/or its packaging must not be disposed of with unsorted municipal waste. The symbol indicates that this product must be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities.

## **IMPORTANT WARNING NOTES**

1. This dispenser **MUST NOT** be used to dispense petrol or other flammable liquids.
2. It must not be sited adjacent to a petrol dispenser or in any other hazardous zone.
3. On above ground storage tanks a spring loaded angle check valve or pressure regulating valve must be fitted at the tank outlet to prevent loss of fuel under gravity in the event of vandalism or accidental damage.
4. Installation of this equipment and its associated tank, pipe work and fittings should only be carried out by qualified fuel installation engineers.
5. The installation must conform to all relevant electrical and local authority regulations and standards.

## **OPERATION WARNING - FAILURE TO OBSERVE THE WARNINGS BELOW MAY LEAD TO THE PUMP UNIT BEING DAMAGED:**

1. Please ensure that the delivery hose is stowed correctly after each use to prevent it being run over by a vehicle.
2. Do not run the pump dry.
3. Do not run the pump for prolonged periods on bypass. (Nozzle closed)  
**Maximum running time on bypass = 2 minutes.**

## **INSTALLATION INSTRUCTIONS**

1. Mount to a wall or suitable vertical surface.
2. Connect the pipe from the tank to the suction inlet of the pump. The inlet thread is 1" BSP female. If the pump is more than 2 metres from the tank the pipe should be 1½" diameter reducing to the appropriate size just before the pump inlet. Seal the threads with a suitable thread-sealing compound.
3. Seal the supplied nipple, elbow and brass bush into the meter outlet using thread sealing tape or a suitable thread-sealing compound.
4. Connect the hose supplied (or a suitable "soft wall" hose) to the meter outlet elbow. In turn connect the nozzle supplied (or a suitable trigger or automatic nozzle) onto the hose. Seal both joints with a suitable thread-sealing compound.
5. Connect the flying lead to a suitable power supply, fused at 10 amps for 230V as follows:  
Brown – Live,    Blue – Neutral,    Yellow/Green - Earth
6. The pump unit is self-priming. However, if the pump unit is struggling to prime when using an automatic nozzle then stop the pump unit, remove the nozzle from the end of the delivery hose, place the end of the delivery hose into a suitable container or tank, and start the pump unit again. Once primed refit nozzle.

## **INSTRUCTIONS FOR USE**

1. Switch on pump
2. Place nozzle spout in fuel tank
3. Squeeze nozzle trigger to dispense fuel
4. On completion of delivery release trigger and remove nozzle from fuel tank

## **CALIBRATION**

The meter is pre-calibrated to be used with standard diesel fuels. However, specific operating conditions such as flow rate, temperature and density of fuel may affect the meter accuracy and a re-calibration should be carried out after the installation has been completed.

A new calibration is necessary each time the meter is disassembled for maintenance operations or when it is used to measure fluids that differ from standard diesel fuel.

### **CALIBRATION PROCEDURE:**

1. Using a stubby flat ended screwdriver, unscrew the brass calibration cap located underneath the meter outlet port. This will expose the calibration screw.
2. Purge the system (pump, pipelines, meter) of air by dispensing until the flow stream is full and steady.
3. Stop the flow by shutting off the nozzle, but keep the pump running.
4. Reset the register to 0000 using the reset knob.
5. Dispense at the full flow rate into a calibration container having a capacity no lower than 20 litres. Do not reduce the flow in order to reach the graduated zone of the calibration container. The right method is to start and stop the full flow repeatedly until the required filling is obtained.
6. Compare the indication of the calibration container (real value) with the one of the meter (indicated value).
  - a. If the indicated value on the meter register is higher than the real value in the measure can then wind the calibration screw OUT (anti-clockwise).
  - b. If the indicated value on the meter register is lower than the real value in the measure can then wind the calibration screw IN (clockwise).
7. Repeat the operations 4 to 6 until accuracy is satisfactory.
8. Refit the brass calibration cap.

# **E.C. DECLARATION OF CONFORMITY**



**HYTEK**  
FUEL & LUBRICATION  
EQUIPMENT

Date of Issue: 28<sup>th</sup> May 2014

Equipment Details: ECON45 diesel pumps

Applicable standards: EMC  
EN61000-6-3:2007  
EN61000-3-2:2006  
EN61000-3-3:2008 Emissions  
EN61000-6-1:2007 Immunity

2006/95/EC Electrical Equipment (Low Voltage)

Machinery Directive 2006/42/EC

The Pressure Equipment Regulations  
1999 S.I. 1999/2001

Entry Into Force:- 29 November 1999

Amended to S.I. 2002/1267

Pressure Equipment Directive 97/23/EC

Waste Electrical and Electronic Equipment  
Regulations 2006

2002/96/EC 2003/108/EC

2011/65/EU RoHS Directive

Certificate Numbers:  
and Details RoHS test report number NB2010060608  
By Product Technology Service (Ningbo) Co.  
6&7F, 59, Huayu Road, Yinzhou District  
Ningbo 315192 P.R. China

Certificate Numbers:  
and Details EMC test report number:  
SZEE090616404102-1  
By Centre Testing International Corporation  
Building C, Hongwei Industrial Zone,  
Baoan 70 District, Shenzhen, Guangdong, China

Authorized By: Clive Wellings  
Technical Manager Hytek

Declaration Number: EC053