
Adjusting the Timer Relay

The Timer is pre-set to 5 minutes.

The relay is set at below:

The top timer is set to 20m and the bottom timer is set to 5 secs, this equates to 5mins run time.

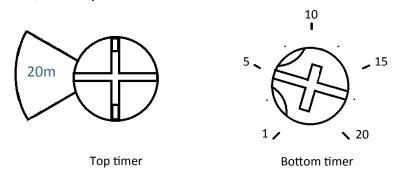

To adjust the timer (in minutes) the bottom timer can be set to the corresponding number, e.g. 1 is 1 minute and 15 is 15 minutes. The dial has mid-intervals which equate to 2.5 minutes, 7.5 minutes, 12.5 minutes and 17.5 minutes.

If you need further assistance please contact our


Technical team on 0121 351 4445



ELEC5023 230v Pump Timer





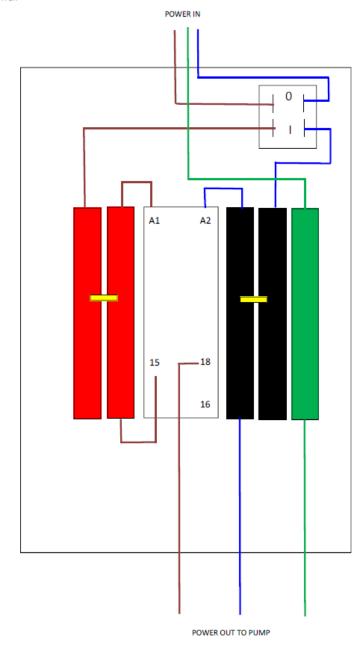

The CTS 230v timer box is pre-set to run for 5 minutes.

Operating the timer:

Press the switch ON and the timer will be active for 5 minutes. You can turn the switch off at any time to finish dispensing or leave the timer to switch off after the set time.

When using the timer check the switch is in the OFF position, if it is not turn the switch OFF then ON.

If you need to dispense for longer than the set time turn the switch OFF then ON again.



PLASE ENSURE THE TIMER IS WIRED BY A COMPETENT ELECTRICIAN.



