


1. Connect the one end of the 1.2 meter hose to the elbow on the top of the CDS / SEC fitting and clamp into place with one of the mikalor clips (1).
2. Connect the other end of the 1.2 meter hose to the bottom of the hand pump, after you have screwed the pump into position on the rear IBC plate, again clamp into place with a mikalor clip (2).
3. Fit the one end of the 1.8 meter hose to the outlet of the hand pump, and the other end to the inlet of the black nozzle, securing into place with the two mikalors left.

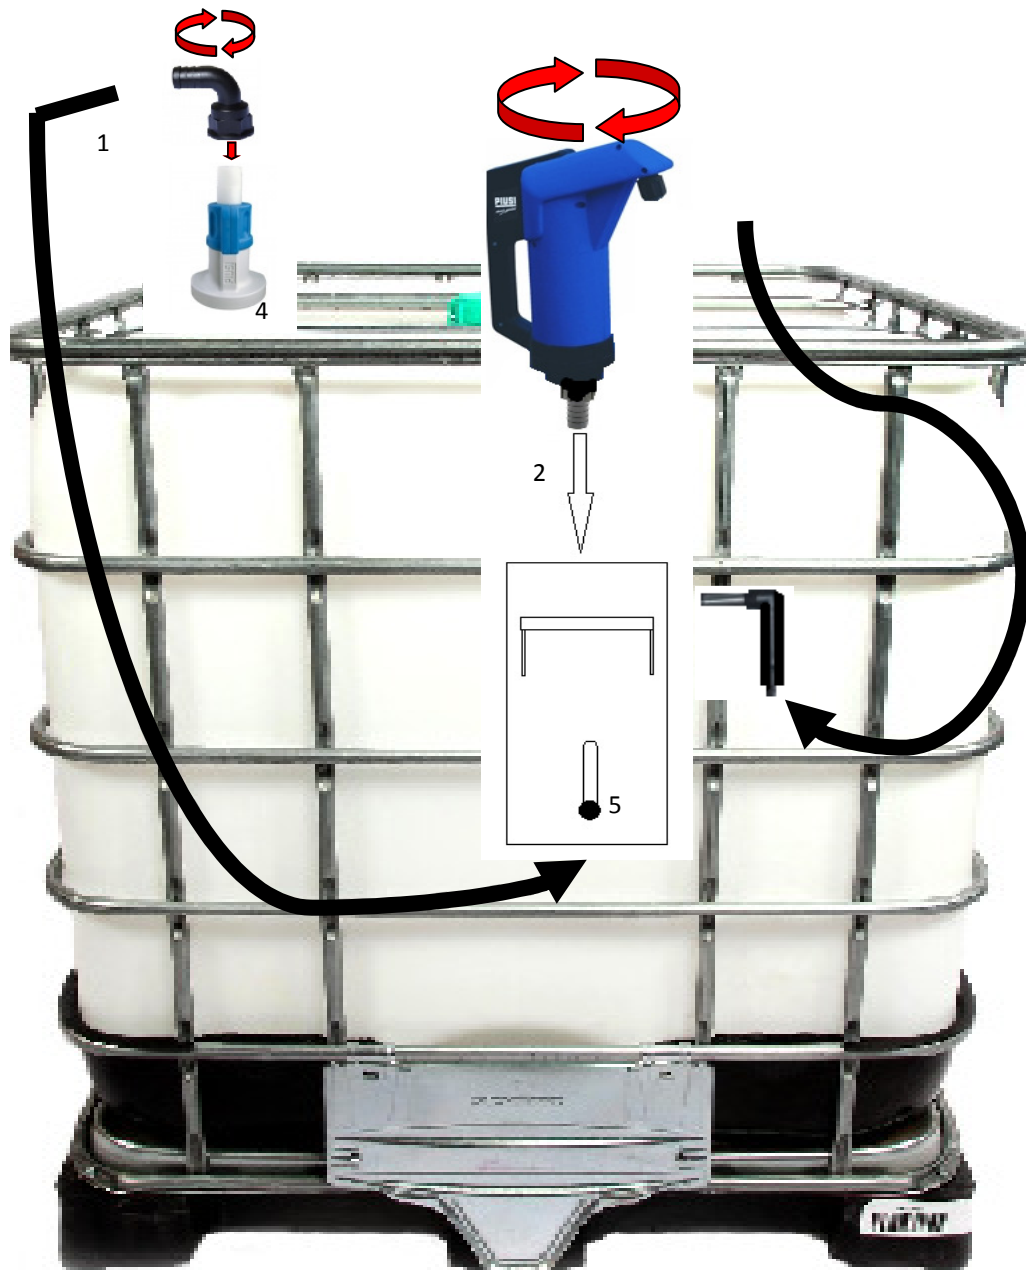

4. Slide the CDS/SEC connector onto the top IBC fittings and turn the blue handle until the fitting is tight (4).
5. Fit the plate to the IBC and secure in place with the lower knurled thumb bolt (5)
6. You are now ready to use your adblue pump.