

# DV - Drum Valve Coupler



User Instructions



1 Remove Tamper Evident cap (if installed).



2 Align coupler pins with corresponding slots in Drum Valve.



3 Rotate coupler clockwise 1/3 turn until it stops.

4



Push down handle to engage.



Coupler properly installed.

Ready to dispense.




Push down release tab with thumb allowing handle to come up.




Rotate coupler 1/3 turn counter clockwise until it stops. Coupler may now be removed.

# Typical Rinsing System Diagram

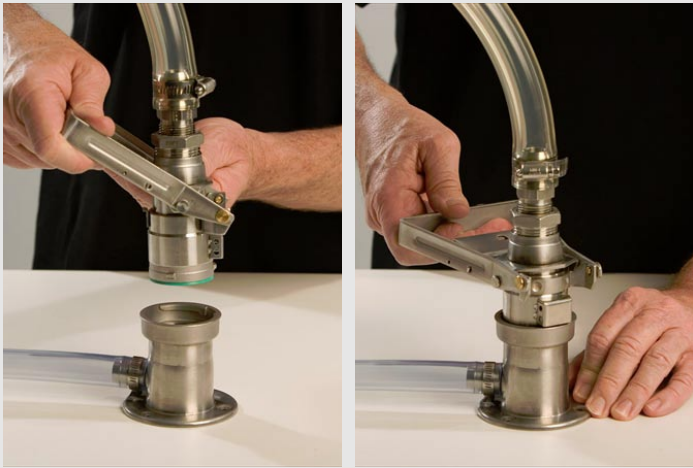

Drum Valve Coupler with rinsing socket.

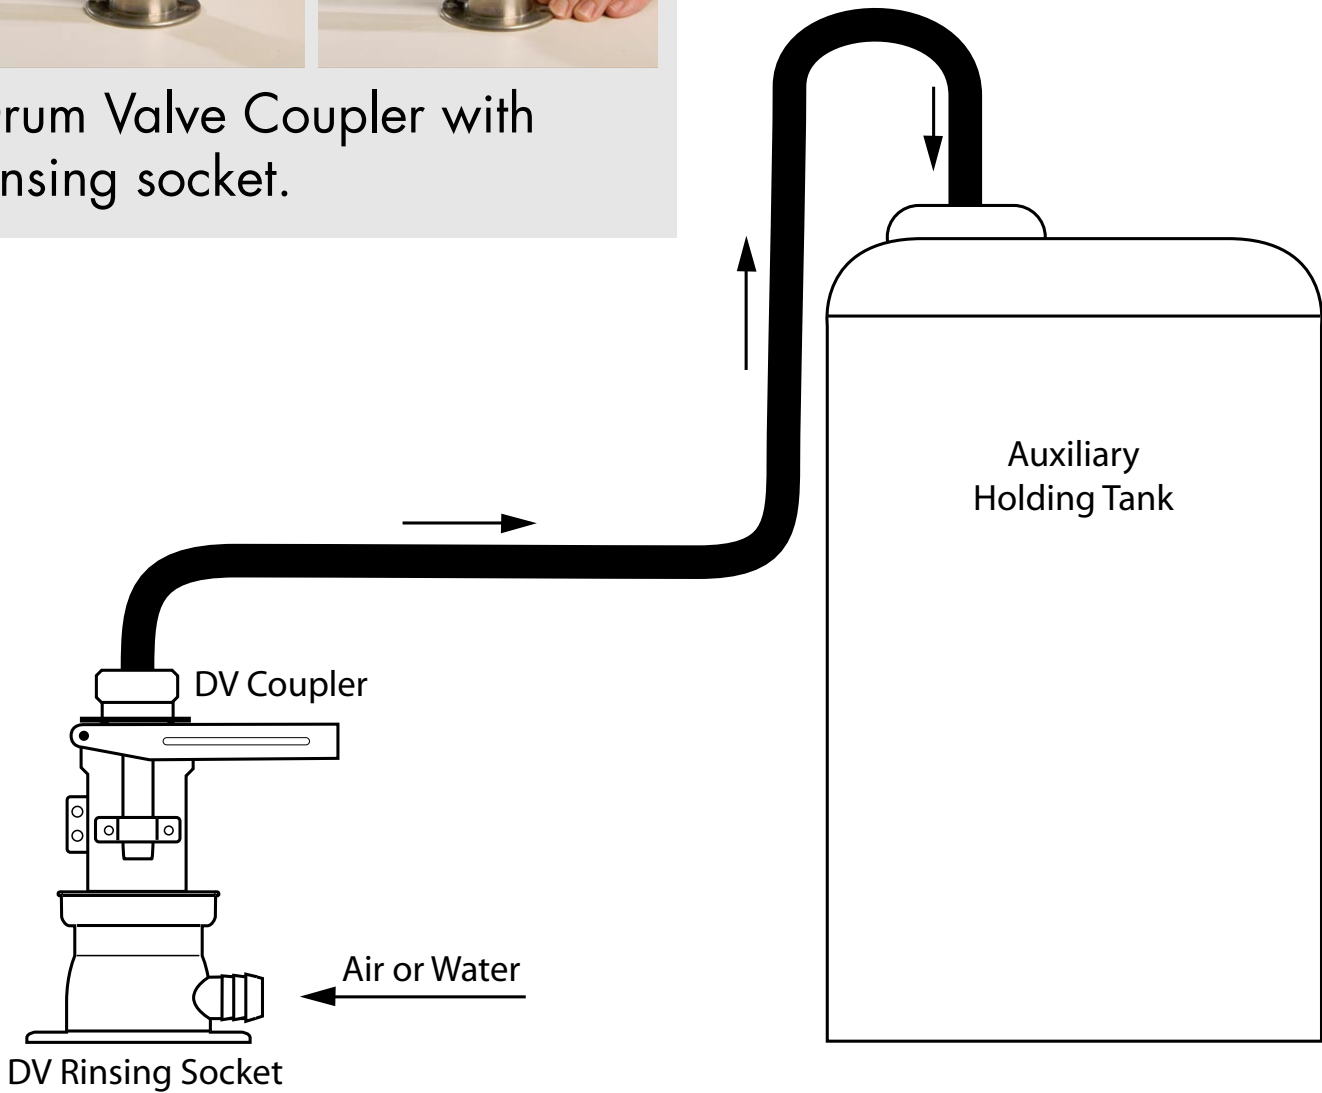

# DV - Drum Valve Coupler



User Instructions