

SPECTRA PUMP RANGE WALL MOUNT SECURITY CABINET



Applies to the following models **ONLY**:

SPS.PCTE

SPH.PCTE

SPU.PCTE

Please read carefully **BEFORE** commencing installation.

Registered Office: HYTEK (GB) LIMITED,
Delta House, Green Street, Elsenham, Bishop's Stortford,
CM22 6DS UK.

Registered in England No. 1915382

Tel: +44 (0) 1279 815 600

Email: info@hytekgb.com


IMPORTANT WARNING NOTES

1. This cabinet must not be sited adjacent to a petrol dispenser or any other hazardous zone.
2. On above ground storage tanks, a spring-loaded angle check valve or pressure regulating valve must be fitted at the tank outlet to prevent loss of fuel under gravity in the event of vandalism or accidental damage.
3. Installation of this equipment and its associated tank, pipe work and fittings should only be carried out by qualified fuel installation engineers.
4. The installation must conform to all relevant electrical and local authority regulations and standards.

INSTALLATION

1. Bolt the cabinet to a wall using the holes provided. See mounting diagram for details.
2. Slide the suction pipe supplied through the side of the cabinet and screw into the pump suction inlet. Fit the elbow supplied and align pointing upwards for top entry and downwards for bottom entry. Seal the threads with a suitable thread-sealing compound.
3. Connect the pipe from the tank to the elbow fitted in part 2 above. Seal the thread with a suitable thread-sealing compound.
4. 20mm diameter gland holes are provided in the cabinet to run electrical cable through to the inside. See mounting diagram for details.

ENVIRONMENTAL INFORMATION

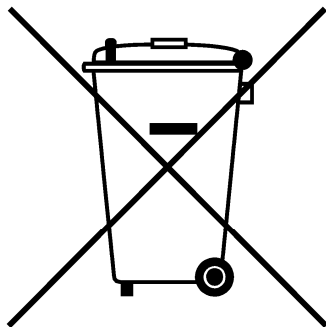

UK Regulation SI 2013 3113 requires that the equipment bearing this symbol on the product an/or its packaging must not be disposed of with unsorted municipal waste. The symbol indicates that this product must be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities.

SPECTRA CABINET DIMENSIONS

FRONT VIEW

130mm
56LPM Version
Suction Inlet

50mm
75 & 100LPM
Version Inlet

600mm

80mm

800mm

65mm

Suction Inlet

Optional Drip Tray

Liquid Level
Sight Glass

2 x 20mm
Gland Holes
(Blanked)

SIDE VIEW

300mm

60mm

60mm

40mm

REAR VIEW

180mm
56LPM Version
Suction Inlet

130mm
75LPM Version
Suction Inlet

160mm
100LPM Version
Suction Inlet

6 x 7mm
Mounting
Holes

375mm

375mm

25

622mm

DECLARATION OF CONFORMITY



Company Name: **Hytek (GB) Ltd**

Address: **Delta House
Green Street
Elsenham
Bishops Stortford
Hertfordshire
CM22 6DS**

Date of Issue: **6th October 2022**

Equipment Details: **Spectra Pump Units**

Applicable Directives:
& Standards **SI 2016 1091 Electromagnetic Compatibility
Regulations**

SI 2016 1101 Electrical Equipment Safety Regulations

SI 2008 1597 Supply of Machinery Safety Regulations

SI 2016 1105 Pressure Equipment Safety Regulations

**SI 2013 3113 Waste Electrical & Electronic Equipment
Regulations**

**SI 2012 3032 Restriction of Use of Certain Hazardous
Substances Regulations**

Declaration Number: **UK019 Issue 8**

On behalf of the above-named company, I declare under our sole responsibility that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives.

A handwritten signature in cursive script that reads "Clive Wellings".

Clive Wellings, Process Coordinator 6th October 2022, Bishops
Stortford, Herts

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROTECTED BY COPYRIGHT © AND PROPERTY LAWS AND IS THE SOLE PROPERTY OF HYTEK (GB) LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF HYTEK (GB) LTD IS PROHIBITED.